HDM3 Molded Case Circuit Breaker

Accessories Standard:IEC/EN 60947-2




HDM3 accessories

HDM3- List of accessories

Electrical accessories: shunt release, undervoltage release, auxiliary contact, alarm contact, auxiliary alarm integrated release and leakage alarm module

Mechanical accessories: interphase barriers, extension terminal, manual operating mechanism and electric operating mechanism Mechanical accessories: interphase barriers, extension terminal, manual operating mechanism and electric operating mechanism

Overview of Acc

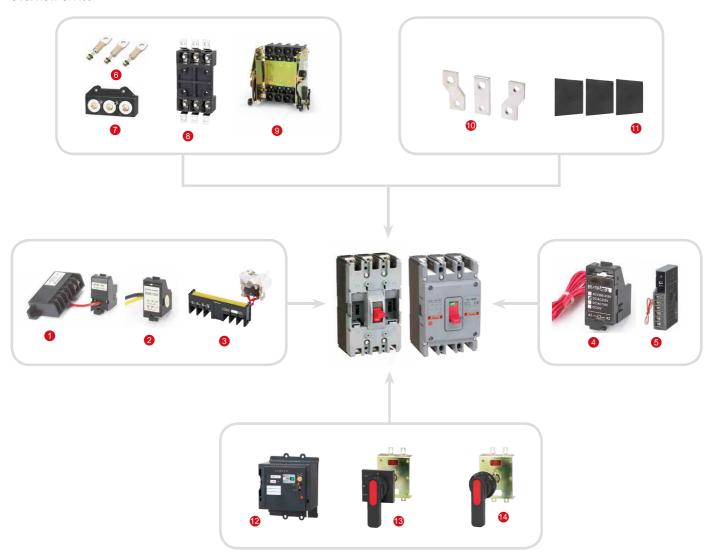

1	Undervoltage release	6	Fixed rear connection	11	interphase barriers
2	Auxiliary contact	7	Plug-in rear connection	12	Electric operating mechanism
3	Alarm contact	8	Plug-in front connection	13	Square handle operating mechanism
4	Shunt release	9	Withdrawable connection	14	Round handle operating mechanism
5	Leakage alarm module	10	Extension terminal		

HDM3 Molded Case Circuit Breaker

Mechanical accessories Standard:IEC/EN 60947-2



Electrical accessories

Auxiliary contact and alarm contact

Auxiliary contact

An accessory connected in the auxiliary circuit of the switching device to indicate the circuit breaker status of ON or OFF or Trip

Alarm contact:

An accessory used to indicate the circuit breaker status of ON or OFF or Trip. When the alarm contact indicates that the circuit breaker is at Trip status, there are the following five possibilities:


- · Overload or short circuit fault
- Residual current fault
- · Manual test button trip
- Shunt release action
- Line fault and undervoltage release action

Electrical wiring diagram

Accessory name	ON	OFF/TRIP	
Auxiliary	F12 F1	F12 F11	
Accessory name	ON	OFF/TRIP	
Alarm	B12 B11	B 14 B11	

Electrical parameters of auxiliary alarm contact					
Conventional Thermal Current		3A			
hermal Current Use class (IEC/EN 60947-2)		AC 15	DC13		
Working electricity 50Hz	AC 400V	0.3A			
electricty 50HZ	DC 220V		0.15A		

Installation diagram of auxiliary contact

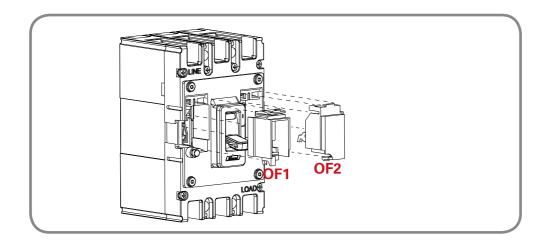



HDM3 Molded Case Circuit Breaker

Electric accessories Standard:IEC/EN 60947-2



HDM3 Installation sites of HDM3 electric accessories

☐ Alarm contact	Auxiliary contact	Shunt release	 Undervoltage release
OS TOTO Note to the	E E E MOD CON I DOE	NA DOD	

Electroma gnetic type	Com- pound	Accessory name	HDM3-63/100L/S	HDM3-100M/F/T /N	HDM3-160 /250	HDM3-400 /630	HDM3-800	HDM3-1250
208	308	Alarm code						
210	310	Shunt release	•	•	•	•	•	•
220	320	Auxiliary contact						
230	330	Undervoltage release	0	0	0	0	0	0
240	340	Shunt+ auxiliary				•	• =	•
250	350	Shunt+ undervoltage	0 •	0 •	0	0 •	0 •	0 •
260	360	Two groups of auxiliary contacts						
270	270	Auxiliary+ undervoltage	0 •	0 •	0 •	0 •	0	0 •
218	318	Shunt + alarm						
228	328	Auxiliary+ alarm						
238	338	Undervoltage+ alarm	0 0	0 0	0 0	0 0	0 🗆	
248	348	Shunt +auxiliary+alarm						
268	368	Two groups of auxiliary+alarm						
278	378	Auxiliary +undervoltage+ alarm		0 -	O •	0 -		

Note: 200 refers to the circuit breaker body only with a magnetic release; 300 refers to the circuit breaker body with thermal trip and electromagnetic trip.